


Notes:

- Covers on circuit breaker compartments must be removable without disturbing meters.
- Meter socket components must be readily accessible and removable for maintenance.
- Weatherproof fittings required.
- Wire sized to total disconnect sizes.
- Neutral(s) may be reduced no more than two sizes on residential application. No reduction of the neutral(s) is allowed on commercial application.
- For all URD jobs, electricians should call in for locate before digging to Bluebonnet equipment.
- Bluebonnet will complete wiring into transformer. Have sufficient amount of wire for termination. Meter loop must remain unenclosed on exterior of structure.
- If a main disconnect module is used, its cover must have provisions for a standard Bluebonnet padlock.
- All secondary connections made by Bluebonnet. Member/Electrician shall coordinate with Bluebonnet personnel to install all conduit and the pulling of the secondary wire to the transformer. Member/Electrician shall notify Bluebonnet 48 hours in advance to schedule a time/date to perform the work.
- If additional trips are made to the site by Bluebonnet personnel, applicable fees may be applied.

\* WIRING INSTALLATIONS MUST MEET LOCAL GUIDELINES, IF APPLICABLE, SET FORTH BY CITY, COUNTY, OR OTHER GOVERNING ENTITY IN THE EVENT THESE REQUIREMENTS ARE MORE STRINGENT THAN BLUEBONNET SPECIFICATIONS. \*

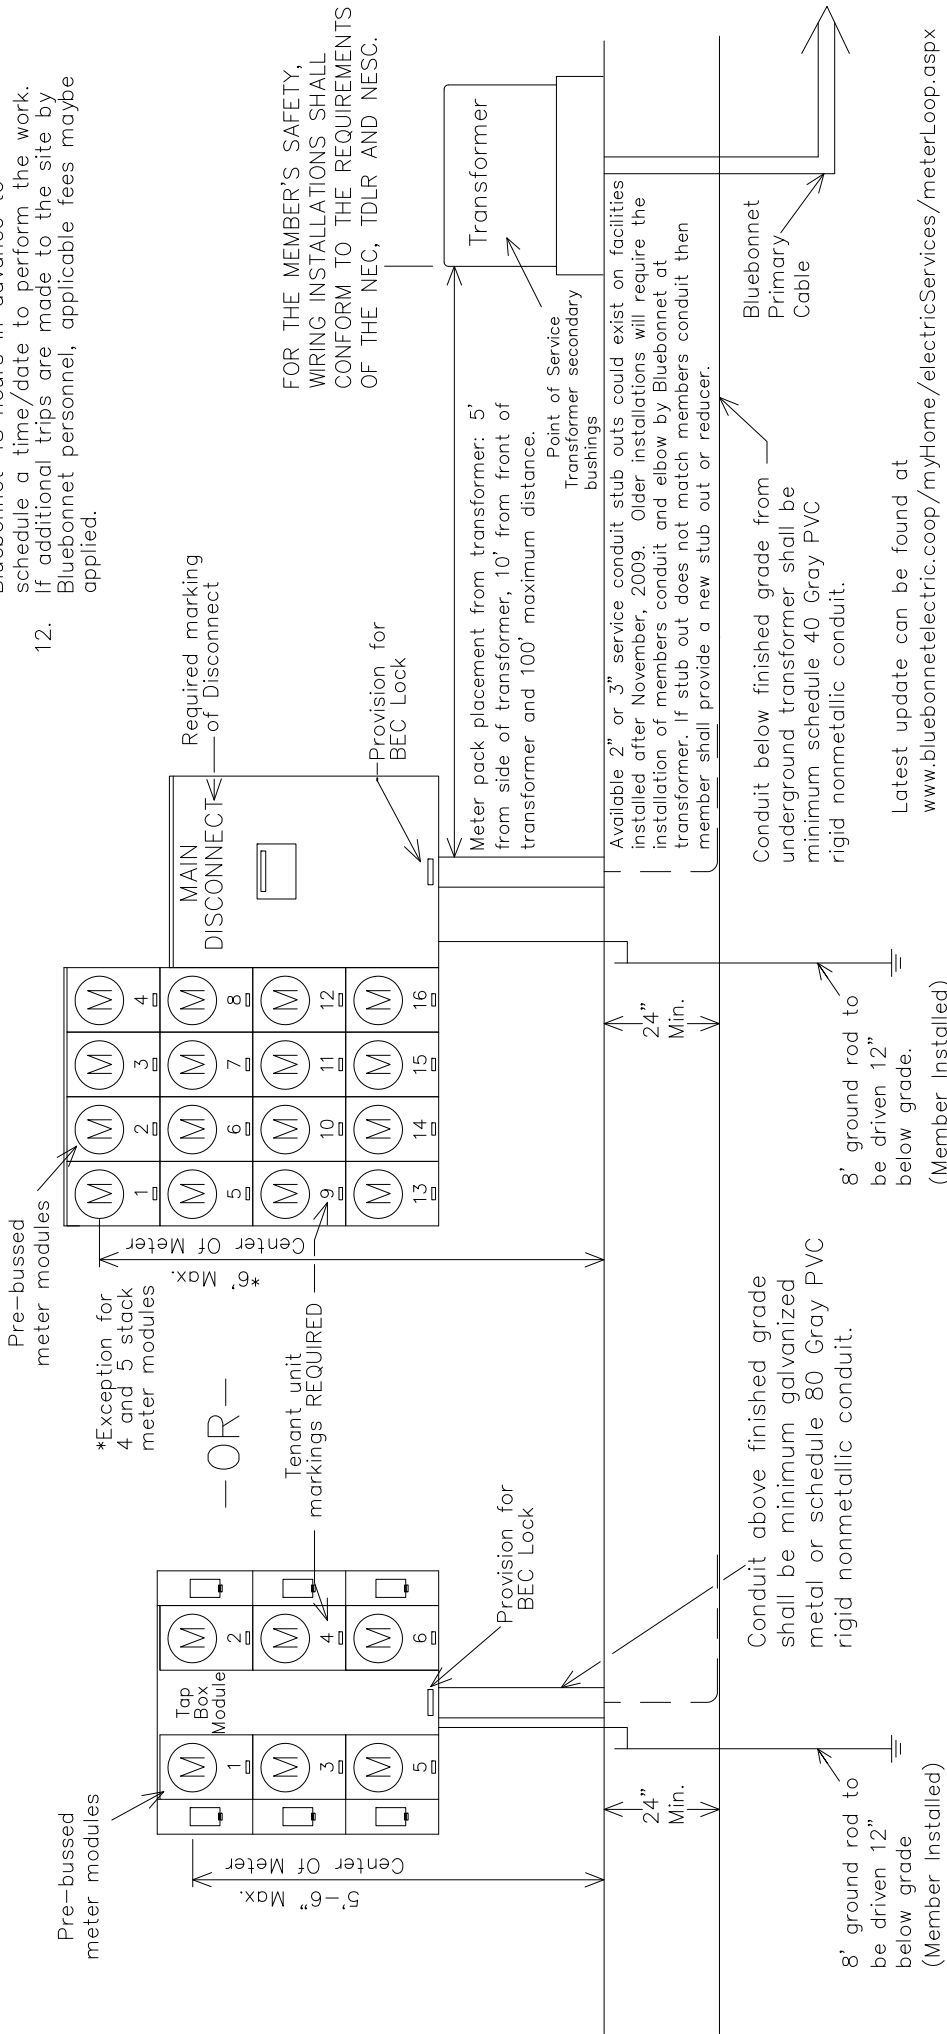

	<b>10 60-200 AMP UNDERGROUND MULTI-PACK METERS ON BUILDING</b>	Drawn By : <b>BS</b>	Checked By : <b>MS COMMITTEE</b>	Approved By : <b>TE</b>
	DATE: _____	Scale : <b>NONE</b>	Date : <b>01-20-2015</b>	MS-207